Verlegehinweise

Laying instructions

Starke Verbindung
Kluge Technik
Strong contacts
Clever technology

Einsatzbereich:
Diese Profile eignen sich für den Abschluss verschiedener Bodenbeläge in Form einer Rampe oder Höhenanpassung mit festem Maß.

Verschrauben:
Die Profile werden mit dem Untergrund fest durch Verschrauben verbunden. Legen Sie dazu das passend geschnittene Profil an und zeichnen die Löcher mittels geeignetem Stift oder Körner an. In mineralischen Untergründen bohren Sie nun die entsprechenden Löcher und versehen diese nach entfernen sämtlichen Bohrstaubs mit den passenden Dübeln. Schrauben Sie nun das Profil mittels eines Schraubendrehers oder Akkuschrauber unter der Verwendung geeigneter Schrauben an. Bei Holzuntergründen kann je nach Holzart auf ein Vorbohren verzichtet werden und direkt angeschraubt werden.

Selbstklebende Profile:
Akklimatisieren Sie das Profil mindestens 12 – 24 Stunden, damit der Kleber zur Verklebung Raumtemperatur hat. Die Oberfläche des Bodenbelags an der Klebestelle vorher gründlich mit Alkoholreiniger reinigen.

Profile mit Selbstklebeausstattung können nach dem Zuschnitt direkt am Bestimmungsort verklebt werden. Bitte beachten Sie, dass der Klebebereich stets sauber und tragfähig ist. Ggf. muss die Klebestelle gereinigt werden. Verwenden Sie hierzu keine filmbildenden Reinigungsmittel da diese ansonsten eine Trennschicht hinterlassen.

Notfalls empfehlen wir die Klebefläche mit einem Haftvermittler vorzubehandeln. Zum Verkleben der Profile trennen Sie das Schutzpapier von der Selbstklebeausrüstung und legen das Profil an der Montagestelle an.

Vergewissern Sie sich das, dass Profil mit ausreichendem Druck fest mit dem Untergrund verbunden wurde.

Application:
These profiles are suitable to finish various floor coverings in the form of a ramp or height adjustment with fixed dimensions.


Screwing:
The profiles are firmly connected to the ground by screwing. To do this, lay on the cut profile and mark the holes using a suitable pen or grain. In mineral substrates, drill the corresponding holes and provide them with the appropriate dowels after removing all drilling dust. Now screw the profile using a screwdriver or cordless screwdriver using suitable screws. For wooden subfloors, depending on the type of wood, pre-drilling can be dispensed and the profiles cab be screwed directly.

Auto-adhesive profiles:
Acclimate the profile for at least 12 - 24 hours so that the adhesive for bonding has room temperature. Clean the surface of the flooring thoroughly at the splice with alcohol cleaner.

Auto-adhesive profiles can be glued directly after it was cut to the desired length. Please note that the gluing area is always clean and stable. Do not use film-forming cleaning agents as these will otherwise leave a release layer.

To be sure we recommend to pretreat the adhesive surface with a primer. To glue the profiles, separate the protective paper from the adhesive and attach the profile to the desired location.

Make sure that the profile has been firmly bonded to the ground with sufficient pressure.

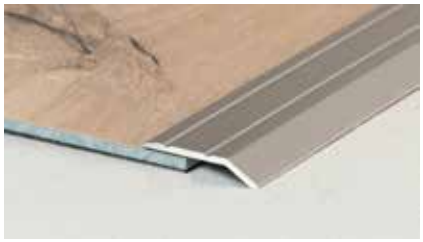







Carl Prinz GmbH & Co. KG
von-Monschaw-Str. 5, D-47574 Goch
www.carlprinz.de

Mit Erscheinen dieses Dokuments verlieren alle Vorgängerversionen ihre Gültigkeit.
With publication of this document all former versions are invalid.
Quelle / source: medien.carlprinz.de | Datei / file: 14601_VA.pdf | Stand / date: 08.04.2026